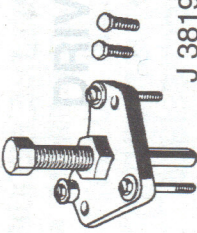
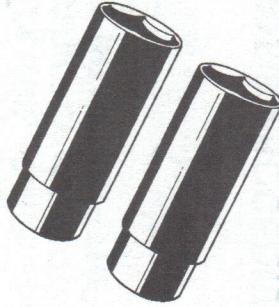
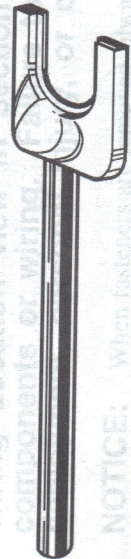
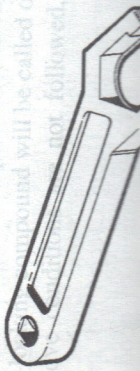


DRIVEABILITY AND EMISSIONS - FUEL INJECTION 6E-13

 <p>J 38197/BT-9189</p>	<p>BALANCER REMOVER (3800 Engine) Used to remove crankshaft pulley.</p>
 <p>J 38724</p>	<p>COOLANT SENSOR SOCKETS (3800 Engine)</p>
 <p>J 38491</p>	<p>SPARK PLUG BOOT REMOVAL TOOL (3800 Engine) Used to prevent damage to wire by breaking plug/boot bond.</p>
 <p>J 38491</p>	<p>OIL PRESSURE SENSOR WRENCH (3800 Engine) Used to remove or install oil pressure sensor.</p>